


Instructions

- 1) Remove Slalom Glider from supports and crossover, using the included 6-Lobe Driver.
- 2) Remove retainer clamps and ball retainers. After removing ball retainers, press (8) locking hole plugs into holes.
NOTE: Do not remove large ball clamps from arches.
- 3) Remove crossover, curved loop pole, and supports.
 - a) If possible, remove the supports and curved loop pole with footings. Fill the footing holes, tamp, and replace surfacing.
 - b) If the footings cannot be removed, cut the support posts and curved loop pole below the subgrade, backfill, and replace surfacing.
- 4) Discard all fasteners and parts that have been removed.

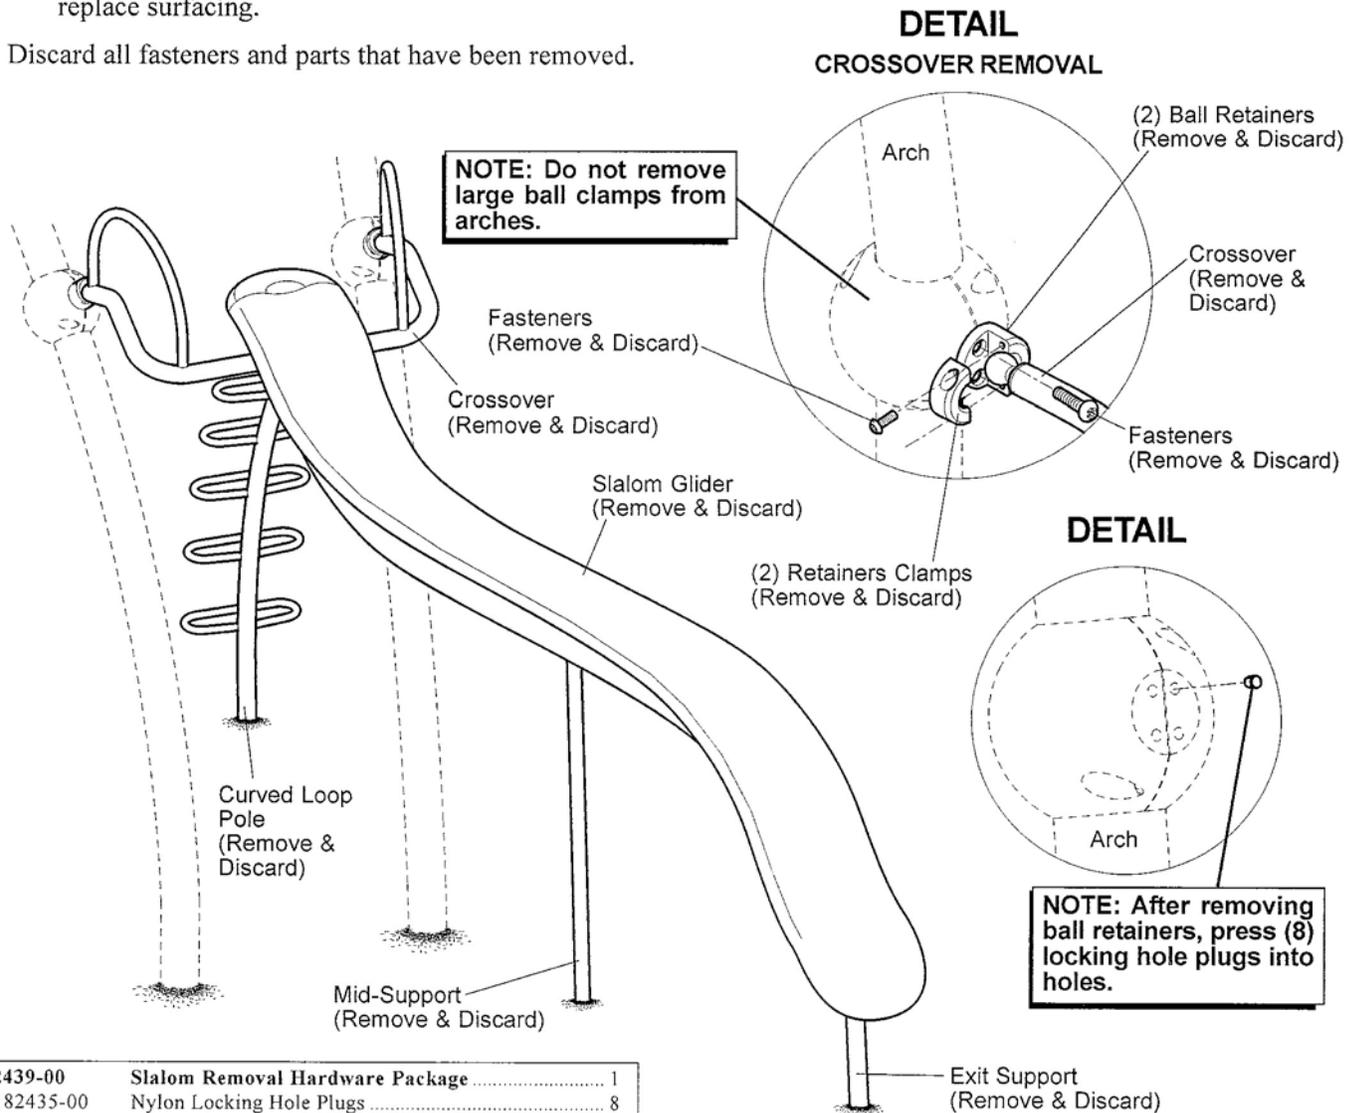

182439-00	Slalom Removal Hardware Package	1
182435-00	Nylon Locking Hole Plugs	8
146007-00	6-Lobe Driver (T-45) (used with a 3/16" socket)	2

Slalom Glider® Removal